




Instruction Sheet

Push the tailgate support bar into the tailgate latching system. Facing pins to the inside of the pickup truck. Fig 1,2,3 Then push down till the latch locks in place.

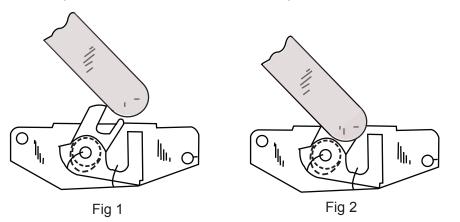

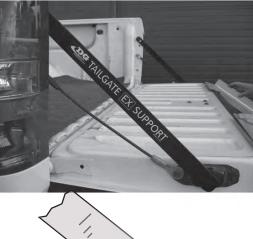

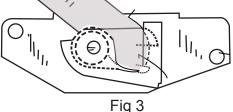

Lift the tailgate up a few inches then hook the other end of the tailgate support bar to the existing pin on the bed of the truck. Repeat for the other side of the tailgate. Fig 4

NOTE:

When tailgate supports bars are installed there will be some play.

As weight is added and distributed the cables will stretch and the support bar will tighten and strengthen your support that is needed for the weight you are putting on the tailgate.

To Remove:

Lift tailgate handle up to release tailgate support bars.

NOTE:

Inspect your OEM tailgate cables for wear and tear, and replace if needed. Use only OEM tailgate cables.

Some pickup trucks from 2007-and older... after instulling tailgate bars, if bars are tight and cables have play... Cables are stretched, replace with New OEM Cables to resolve this problem.

Some trucks may need minor adjustments by adjusting the 2 pins (Loosen the pin, slidding pin a little to the direction needed) Re-tighten the pin, this should Not effect the tailgate closure.

Fig 4

1

WARNING!"

"Tailgate Support Bars are NOT designed to take the place of your OEM tailgate cables." Tailgate Support bars are designed as a supplement to OEM cables and should only be used during loading and unloading. Remove "Tailgate Support Bars before operating vehicle. To prevent injury or damage, DO NOT overload your tailgate beyond OEM Specifications.